

relax and allow us
to take control

Pressure Control DC 300

Our pressure control DC 300 serves to regulate the pressure of air springs which carry a clamping plate or a concrete foundation. It is recommended in case the level of the seismic mass is only of smaller importance. This control can only be applied for air springs of our BZ-line though.

The pressure control serves to adjust the supply pressure which feeds the air springs. These are distributed to three control loops. By means of three pressure reducing valves – one for each control loop – you can also control the corresponding system pressure individually. By changing the pressure you can regulate the level of the seismic mass.

Supply pressure: 6 – 10 bar

System pressure: 0 – 7 bar

